



10019

FIG. 196—TRANSFER CASE—LATE CJ-3B, CJ-5, CJ-6

1—Companion Flange
 2—Brake Drum
 3—Emergency Brake
 4—Operating Lever
 5—Oil Seal
 6—Lever Stud
 7—Rear Cap
 8—Shims
 9—Screw
 10—Lockwasher
 11—Bolt
 12—Rear Cover
 13—Gasket
 14—Lock Plate
 15—Transfer Case
 16—Shift Rod
 17—Poppet Plug
 18—Poppet Spring
 19—Poppet Ball
 20—Interlock
 21—Gasket
 22—Front Cap
 23—Breather
 24—Shift Lever Spring
 25—Shift Lever
 25A—Shift Lever (used with 4-speed transmission)

26—Shift Lever Knob
 27—Shift Lever
 27A—Shift Lever (used with 4-speed transmission)
 28—Pivot Pin
 29—Lubrication Fitting
 30—Set Screw
 31—Oil Seal
 32—Front Yoke
 33—Gasket
 34—Bolt
 35—Lockwasher
 36—Shift Rod
 37—Shift Fork
 38—Shift Fork
 39—Filler Pipe Plug
 40—Mainshaft Gear
 41—Plain Washer
 42—Thrust Washer
 43—Intermediate Gear
 44—Snap Ring
 45—Bearing
 46—Nut
 47—Washer
 48—Output Clutch Shaft
 49—Output Clutch Gear
 50—Snap Ring

51—Thrust Washer
 52—Output Shaft Gear
 53—Sliding Gear
 54—Bushing
 55—Output Shaft
 56—Cone and Rollers
 57—Bearing Cup
 58—Speedometer Gear
 59—Needle Bearings
 60—Bearing Spacers
 61—Intermediate Shaft
 62—Drain Plug
 63—Gasket
 64—Nut
 65—Bottom Cover
 66—Sleeve
 67—Speedometer Gear
 68—Bushing
 69—Gasket
 70—Bolt
 71—Bolt
 72—Hex Nut
 72—Bolt
 73—Bolt
 74—Lockwasher
 75—Nut
 76—Output Shaft Seal